

Troubleshooting.

Issue

It doesn't start.

Solution suggestion

Make sure the button to activate the FoldMate Stacker in the program is in the "on" position. Ensure that the FoldMate Stacker is properly seated in its slot on the FoldMate.

It's not homing.

Make sure the product detection sensor's field of view is clear and unobstructed. If the sensor lens is dirty, gently wipe it with a dry, clean cloth.

FoldMate Stacker


Model : FLMT-S1



DOWNLOAD
BROCHURE

riodin

www.riodin.com
info@riodin.com
İstanbul / TÜRKİYE

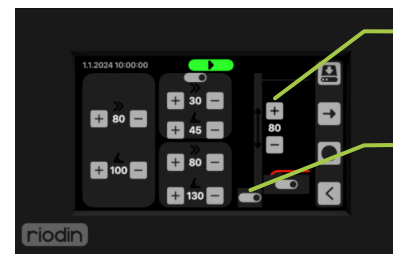

Stacking Quantity.
You can set the stacking quantity from here.

Activation Cutton.
To activate the FoldMate Stacker, turn this button to the "on" position.

